

Clutch Control Turn-On and Turn-Off Look-Ahead Numbers


This table references the Turn-On Look-Ahead and Turn-Off Look-Ahead numbers for both electric clutch and air clutch types.

Planter Unit Seed Meter Type	On/off	Electric Clutch	Air Clutch
Finger Units	Turn On	0.9	1.1
	Turn Off	0.3	0.3
Vacuum	Turn On	0.9	1.1
	Turn Off	0.4	0.4

When operating AutoSwath, do not make changes to the look-ahead settings based on data from the on-screen map. The look-ahead settings in the Planter Unit Seed Meter Type table were created from field testing and machine observations to determine the appropriate settings for each combination of clutch and seed meter. These should be accurate settings unless your planter has been modified.

Small skips and overlaps in the map may be expected but should not require you to adjust settings without first observing your machine's performance. To determine if a setting change is necessary, perform the procedure detailed in "[Testing AutoSwath Performance for Clutch Control](#)" to observe the actual machine performance.

Note: Using the above settings will produce accurate field results. However, small gaps may appear on the display, as in the example below. These gaps do not reflect actual machine performance or log data.

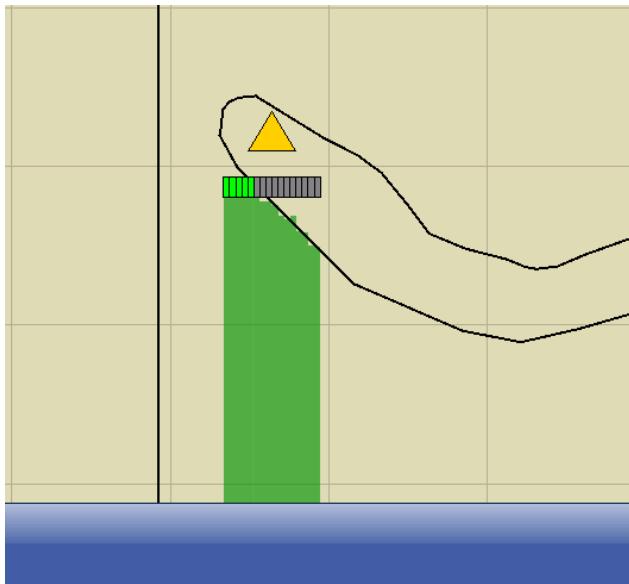

Typical example of a SeedCommand section control coverage map

Article ID: 233
Last updated: 16 Apr, 2014
Revision: 4

PRODUCT SUPPORT INFO -> SeedCommand -> Clutch Control -> Clutch Control Turn-On and Turn-Off Look-Ahead Numbers
<https://support.agleader.com/kbp/index.php?View=entry&EntryID=233>